



Taking apart and cleaning your saxophone:

- 1 Carefully take off the reed, wipe off any water and place it back into the plastic reed sleeve or a reed case.

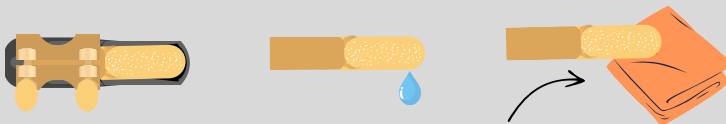

You can use a microfibre cloth for this.


- 2 Take the mouthpiece off the crook and wipe them both dry.

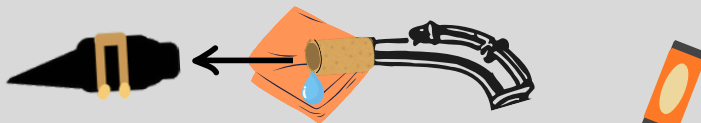

If you find it hard to insert or remove the mouthpiece, use little bit of cork grease.


- 3 Feed your pull through into the saxophone body:

Place the weighted string down the bell, then carefully rotate the body until the weight comes out of other end at the neck. Pull it through.

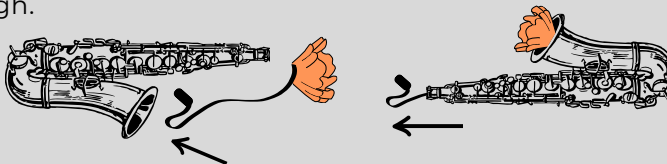

You may need to do this a couple of times to thoroughly dry the body.
Never force the pull through if it gets stuck!

- 4 Place your saxophone, mouthpiece, crook and all other accessories, when dry, safely in the case.

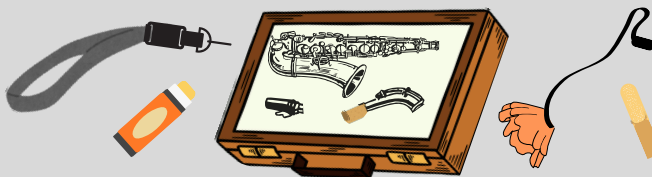

Never place your saxophone down on the palm keys or they will bend out of shape.
Make sure to store your case away from extreme heat or cold.